



GoWISE USA® GW22620 Quick Reference Guide

PLEASE READ THE USER MANUAL BEFORE USE

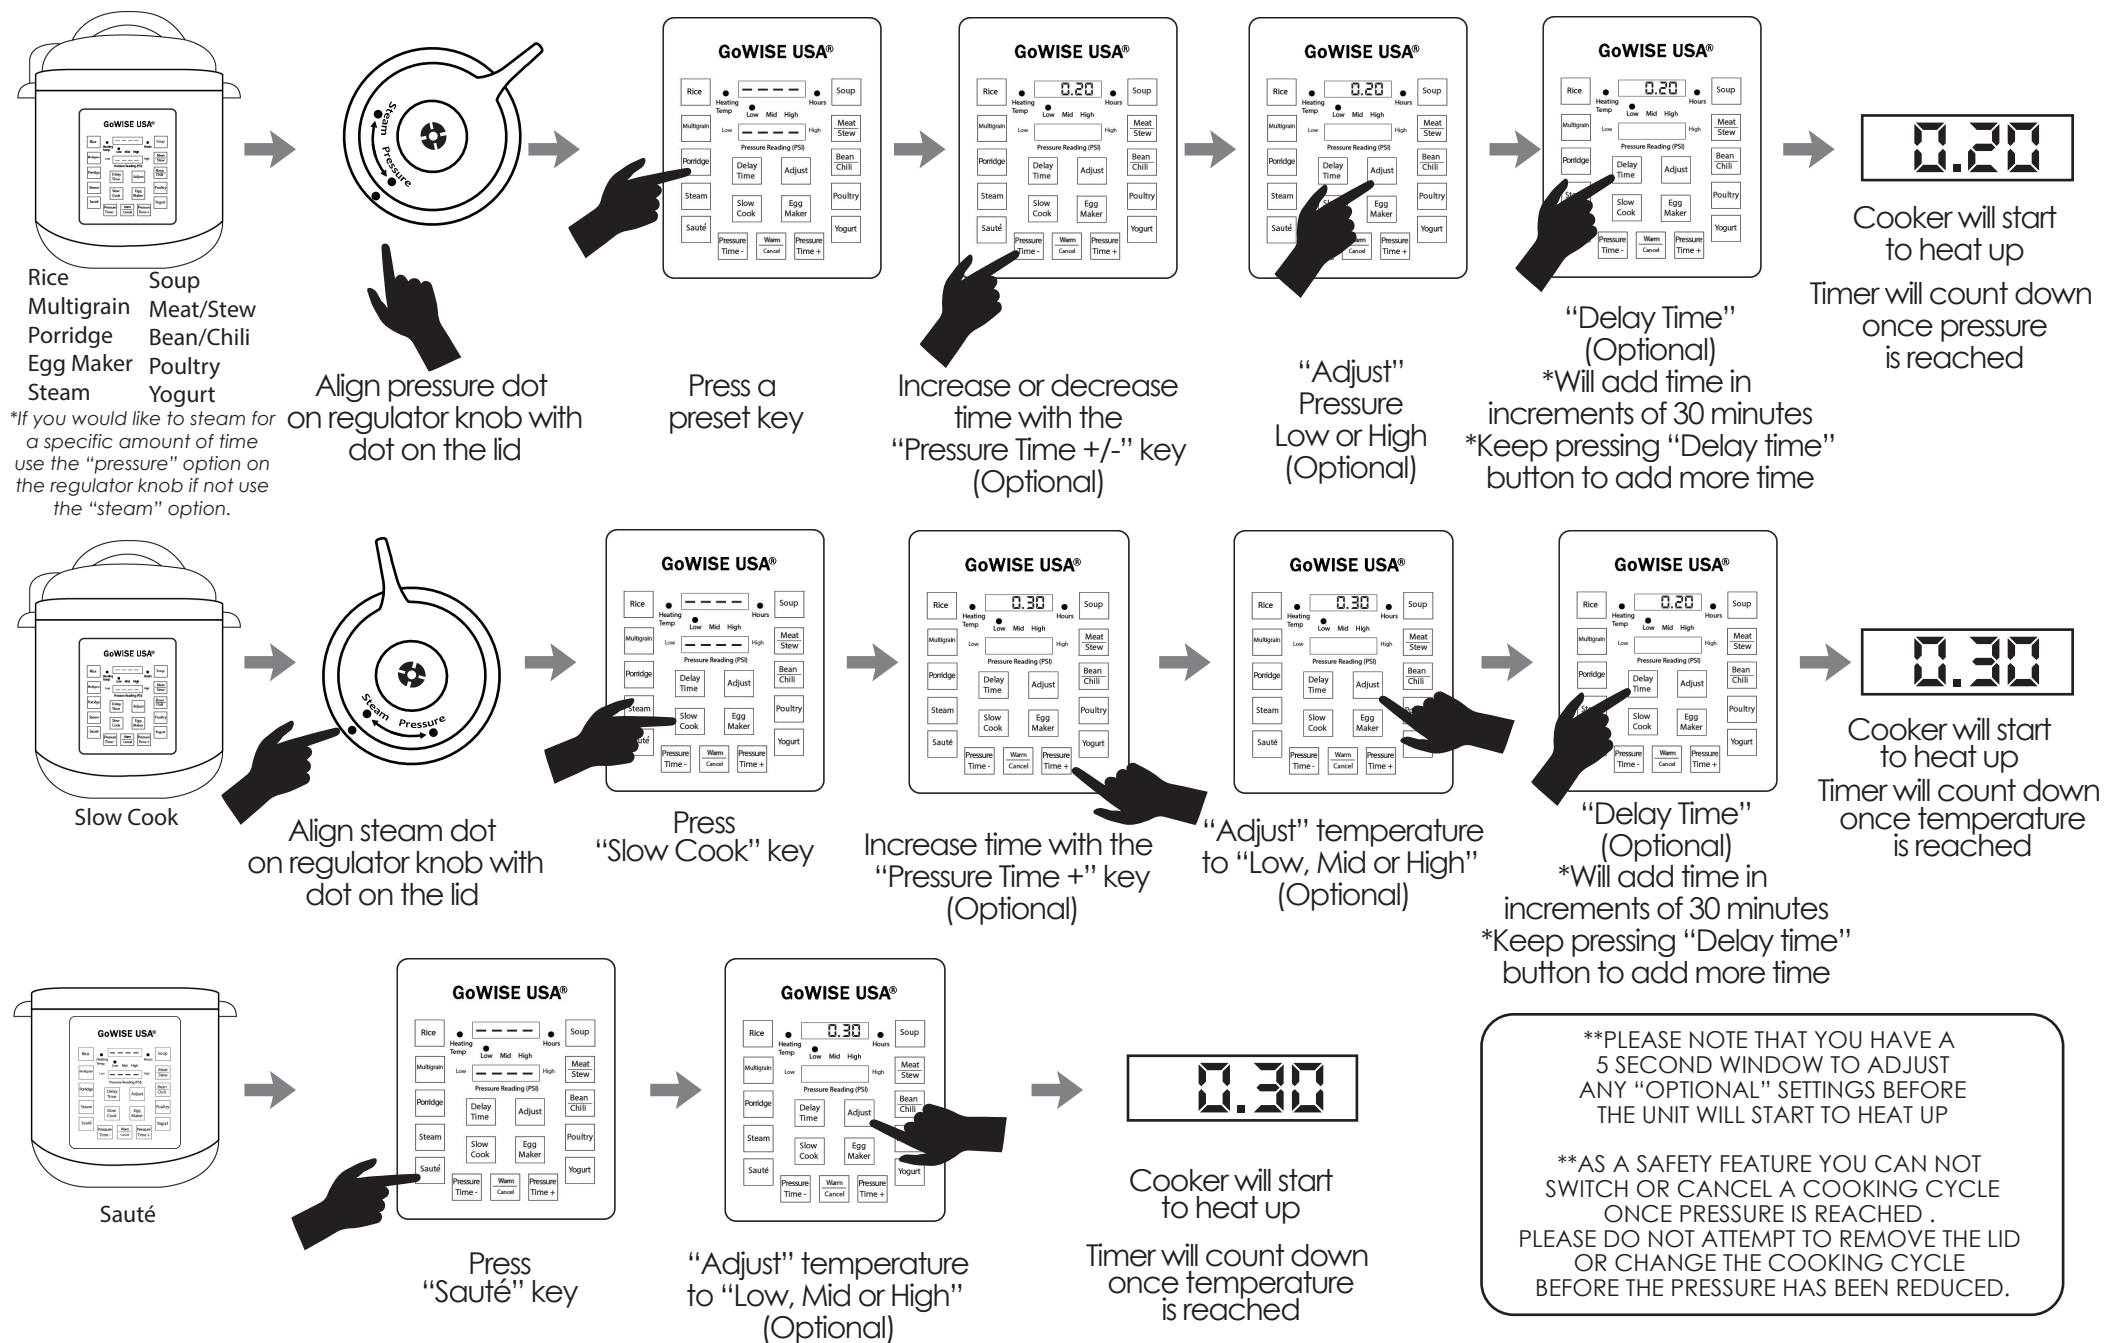

PRESETS & FUNCTIONS

Rice	Rice: 5, 8, 10 minutes (Adjust Pressure)	Soup	Soup: 20, 30, 40 minutes (Adjust Pressure)	Slow Cook	Meat/Stew: 20, 35, 45 minutes (Adjust Pressure)
Multigrain	Multigrain: 20, 40 minutes, 1 hour (Adjust Pressure)	Meat Stew	Meat/Stew: 20, 35, 45 minutes (Adjust Pressure)	Adjust	Adjust: To adjust either the pressure or temperature depending on the cooking setting.
Porridge	Porridge: 15, 20, 30 minutes (Adjust Pressure)	Bean Chili	Bean/Chili: 25, 30, 45 minutes (Adjust Pressure)	Egg Maker	Egg Maker: 1, 3, 5 (Adjust Pressure)
Steam	Steam: 1, 3, 5 minutes (Adjust Pressure)	Poultry	Poultry: 5, 15, 30 minutes (Adjust Pressure)	Pressure Time +/-	Pressure Time + / - : Up to 2 hours (You can also use this option to choose a time between the preset times above and adjust pressure)
Sauté	Sauté: 30 (no pressure, Adjust temperature)	Yogurt	Yogurt: 8, 24 hours (Adjust Temperature)	Warm Cancel	Warm/Cancel: To keep food warm or cancel your settings and turn off the pressure cooker.
	Delay Time		Delay Timer: up to 24 hours		

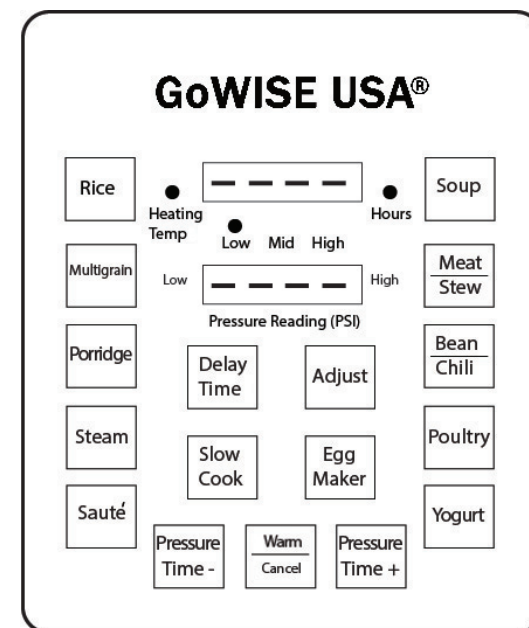

ERROR CODES

E1	Electrical malfunction. Please contact customer support.
E2	Electrical malfunction. Please contact customer support.
E3	Unit has overheated. Unplug the unit and let it cool down for 15 minutes, then restart cycle. *Make sure there is plenty of liquid. *If problem persists contact customer support.
E4	Pressure switch cut off before temperature was reached. Unplug unit and plug it again. *If problem persists contact customer support.

COOKING TEMPERATURES

Pressure LOW: 2.8 PSI - 7.2 PSI
 Pressure HIGH: 7.2 PSI - 13 PSI
 Sauté LOW: 206.60 °F to 210.20 °F
 Sauté MED: 257.00 °F to 293.00 °F
 Sauté HIGH: 312.80 °F to 320.00 °F
 Slow cook LOW: 176.00 °F to 179.60 °F
 Slow cook MED: 179.60 °F to 190.40 °F
 Slow cook HIGH: 190.40 °F to 210.20 °F

*For the Yogurt program, the unit will heat up to 181.40 °F, will boil for 5 minutes, then it stops and cools down naturally. It will beep 10 times as reminder when it finishes boiling and beep 10 times again when temperature drops down to 114.80 °F, at which the display reads "Yogt". Press "Adjust" to select desired temperature and "+" "-" button to set the cooking time.

WARRANTY

This product is warrantied against defects in materials and workmanship for one year from the date of purchase, when used in accordance with the instructions provided in the manual. This warranty does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair.

GoWISE USA®
www.gowiseusa.com
 1-855-233-9199